


The notice while you install IT-8 Installer CD under PC Windows Vista system

By the information of Microtek RDC, our test engineer had found an error message as below illustration, after the installation of IT-8 Installer CD had completed under Windows Vista system.

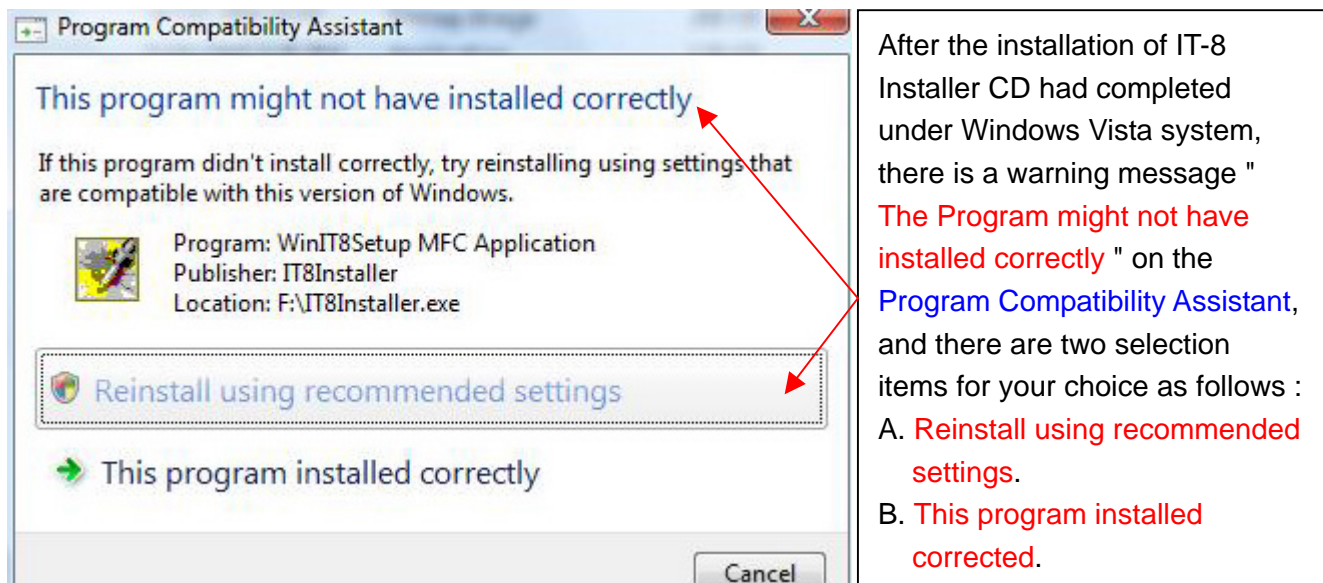

Solution : You can ignore this message and select **This program installed correctly** on the Program Compatibility Assistant as below illustration. In reality, all of IT8 files had installed successfully under PC Windows Vista system.

(All of IT8 files are saved in C:\Program Files \ Microtek \ Microtek Scanner ICC Profiler \ Q60.)

