


The function of **Save multiple images as a single file** in stand alone version of SW 5


- A. After you complete to install scanner driver S/W : ScanWizard 5 into PC Windows system, and then you can find out the icon of “ **Microtek Scanner Configuration** “, “ **ScanWizard 5** “, and “ **My Images** “ will list you on the Desktop of PC Windows system as below illustration.



Double click the icon of “ **Microtek Scanner Configuration** “ from the Desktop of PC Windows system, by this way, you can get into the setting of “ **Microtek Scanner Configuration** “, define the setting of each button function, do image scanning with Microtek scanner by pressing button on control panel of scanner.

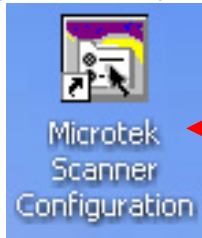


Double click the icon of “ **ScanWizard 5** “ from the Desktop of PC Windows system, and then you can get into stand-alone version of ScanWizard 5 and do image scanning with Microtek scanner.

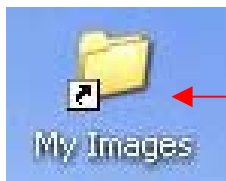


All of scanned images in ScanWizard 5 will be saved into **folder : My images**, its default path in PC Windows system located at “ **C:\Program Files \ Microtek \ ScanWizard 5 \ My Images** ”.

You can click “ **Scan to** “ Button, and then scroll to select “ **Copy** “, “ **OCR** “, “ **E-mail** “, “ **OCR** “ and “ **To Web** “ in **Standard Control Panel** or **Advanced Control Panel** Mode of ScanWizard 5 as below.

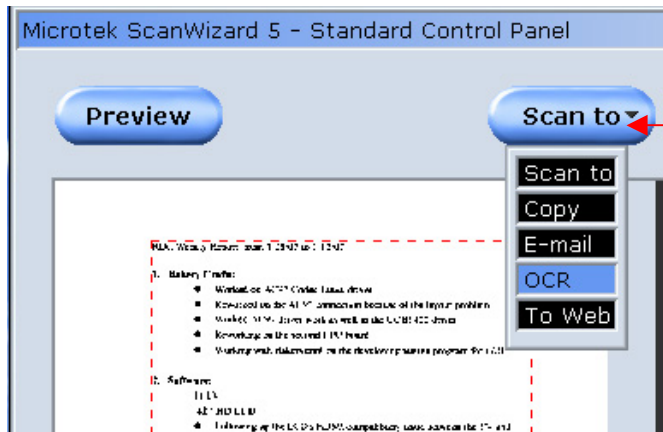

Here is a Standard Control Panel of ScanWizard 5.

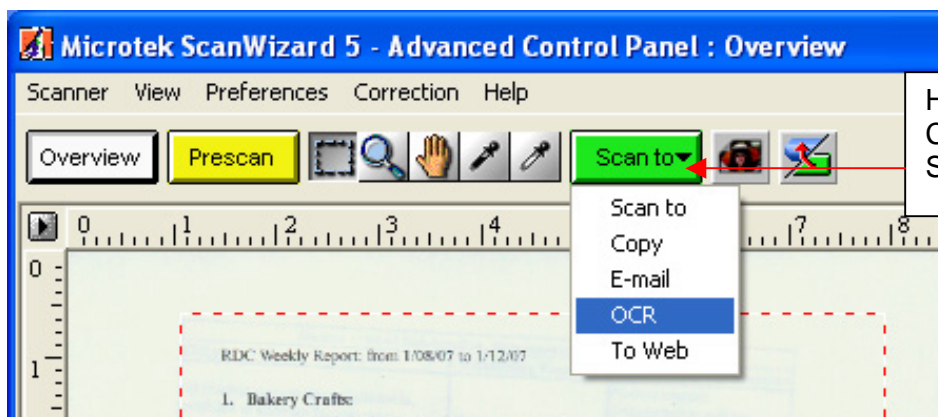


Here is an Advanced Control Panel of ScanWizard 5.


A. The file saving format of “ Scan To “ Button in ScanWizard 5.

If the file saving format in “ Scan To “ is *.TIF, or is *.PDF, or is *.DCX, and then you can select the function of “ Save multiple images as a single file “ in stand alone version of ScanWizard 5 or in MSC (Microtek Scanner Configuration “ under PC Windows system.


- (A). Select the file saving format in “ Scan To “ as *.TIF, or *.PDF, or *.DCX in ScanWizard 5, and then the function of “ Save multiple images as a single file “ will be enable as below illustration.

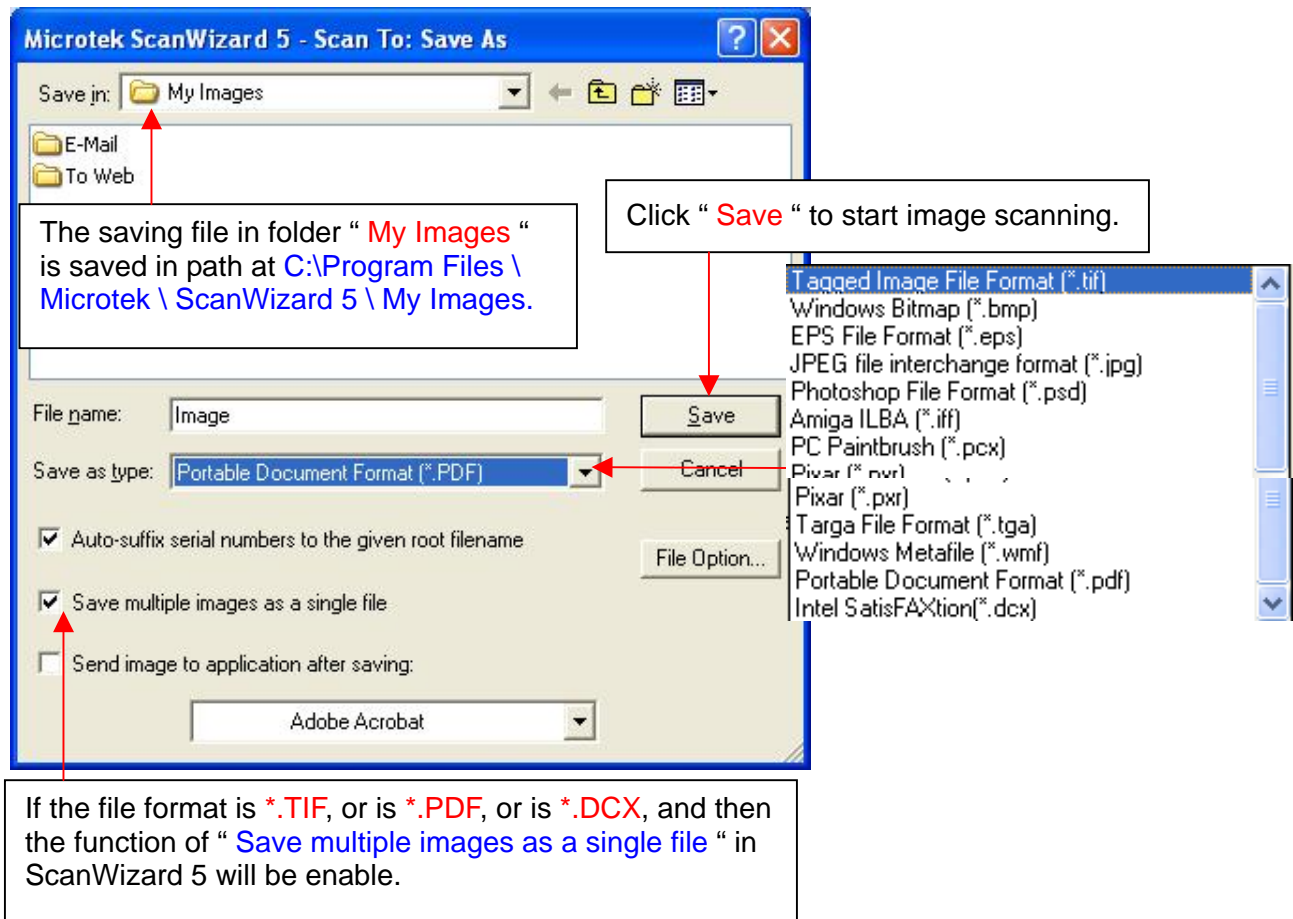


- (B). Below illustration is the message during image scanning at the first scanning after you enable the function of “ Save multiple images as a single file “ in ScanWizard 5.

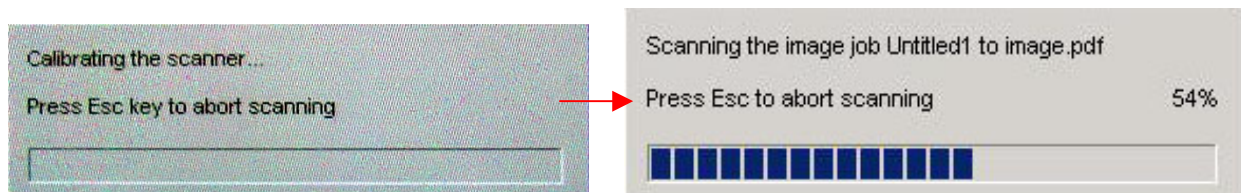


- (C). Below illustration is the message after the first scan job is completed.

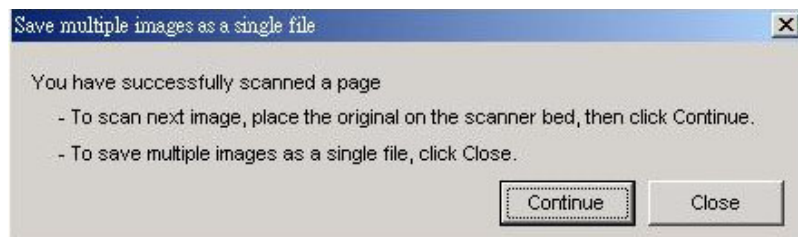

(D). If you click to select “ Continue ” by mouse, and then the scanner will do the second scanning as below illustration.

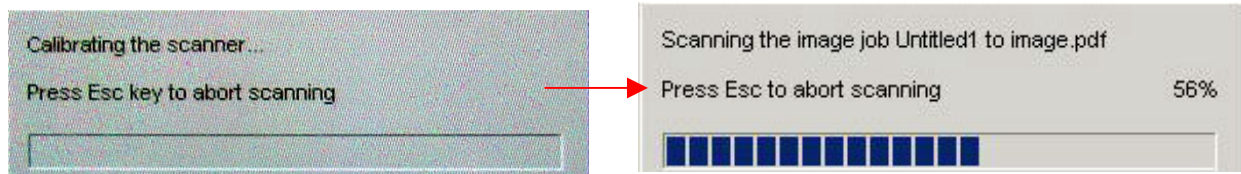

(E). Below illustration is the message after the second scan job is completed.

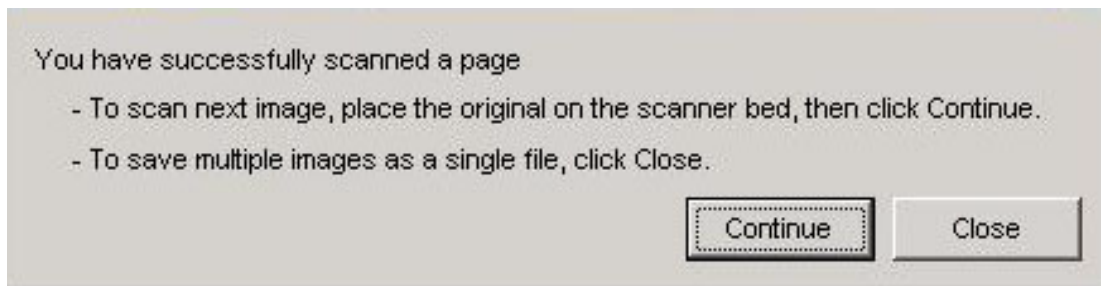

(F). If you completed the scan, you can click to select “ Close ” to end this scan job.

B. The file saving format of “ OCR ” Button and OCR Language in ScanWizard 5.

