

The procedure how to run ScanWizard 5 under Mac OS X system with Standard User Account


Below illustration list you the setting of **Accounts** in System Preference under Mac OS X system.



Notice :

1. Microtek scanner S/W : SW 5 / SW Pro / SW Pro Tx shall install under Mac OS X system with administrator account. (for example : **My Account** : **Test** is with administrator privilege.)
2. Basically, Microtek scanner can run with ScanWizard 5 or other Microtek scanner S/W under Mac OS X system with administrator account only, and can not work under Mac OS X system with limited user account (for example : **Other Accounts** : **Guest** and **David** are with limited privilege.)

Below illustration list you ScanWizard 5 can not run under Mac OS X system with user account.

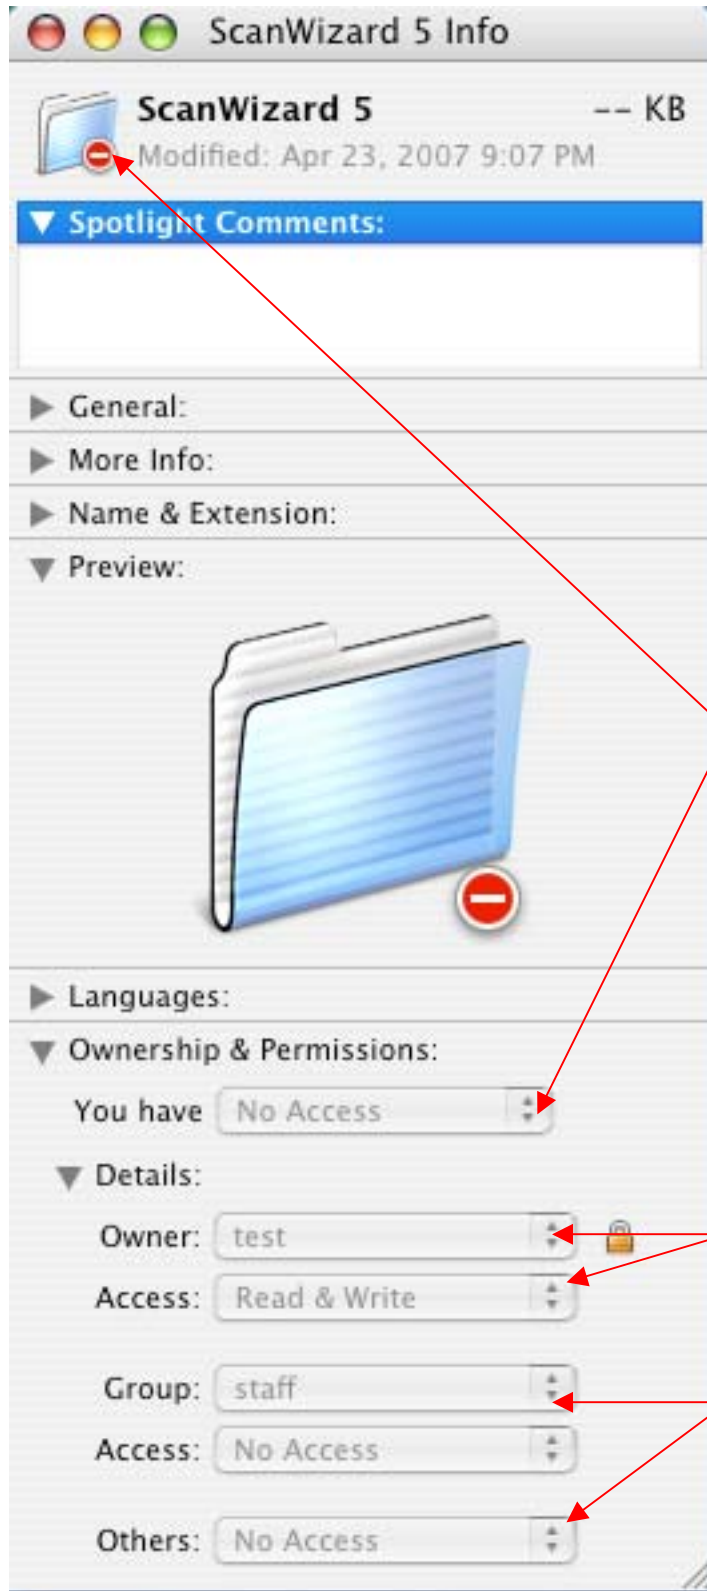

If you log in with user account : **Guest** or **David** into Mac OS X system, ScanWizard 5 in Main Disk / Application / ScanWizard 5 folder will show you **stop sign** there, at this moment, you can open the information of ScanWizard 5 and list you as illustration. The reason is because you have no permissions to access the application from owner with **Test** account.

Here is the information to list you the owner with **Test** account can access the application to read & write.

Here is the information to list you the Group account & Others account has no permission to access the application to read & write.

3. If you want to keep user account run in ScanWizard 5 with Microtek scanner under Mac OS X system, by this way, you shall change the setting from owner with **Test** (**administrator**) account.

Please log in with [Test \(administrator \)](#) account under Mac OS X system, and then change the setting of ScanWizard 5 in Main Disk / Application / ScanWizard 5 folder as below illustration.




The owner with [Test \(administrator \)](#) account has permission to access the application for “ Read & Write “.


You can change the setting of **Group** account or **Others** account, and give permission for **Group** account or **Others** account to access the application by changing the setting from “ [No Access](#) “ to “ [Read & Write](#) ”.

4. After the setting in ScanWizard 5, and then you can log in with user account : **Guest** or **David** into Mac OS X system, and find out the setting of ScanWizard 5 in Main Disk / Application / ScanWizard 5 folder as below illustration.

Here is the information to list you, I log in with user account : **David** into Mac OS X system.

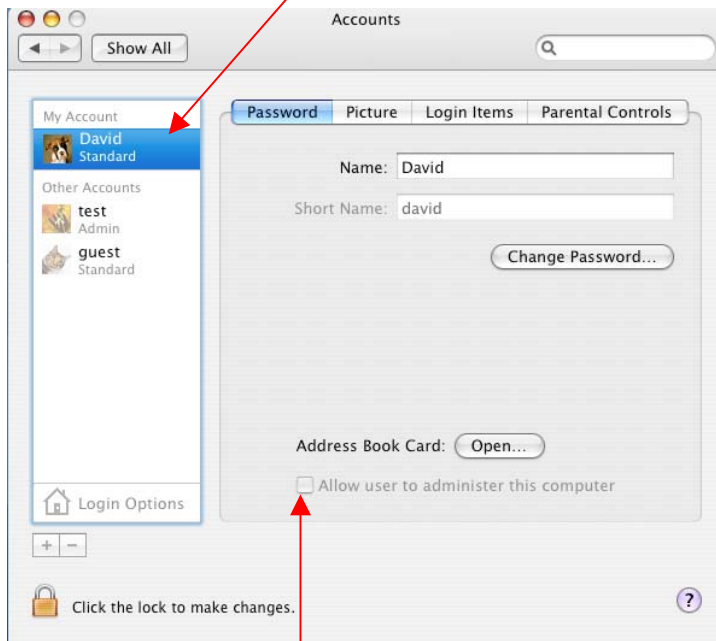

In user account : **David**, I do not have permission : “ **Allow user to administer this computer** “.

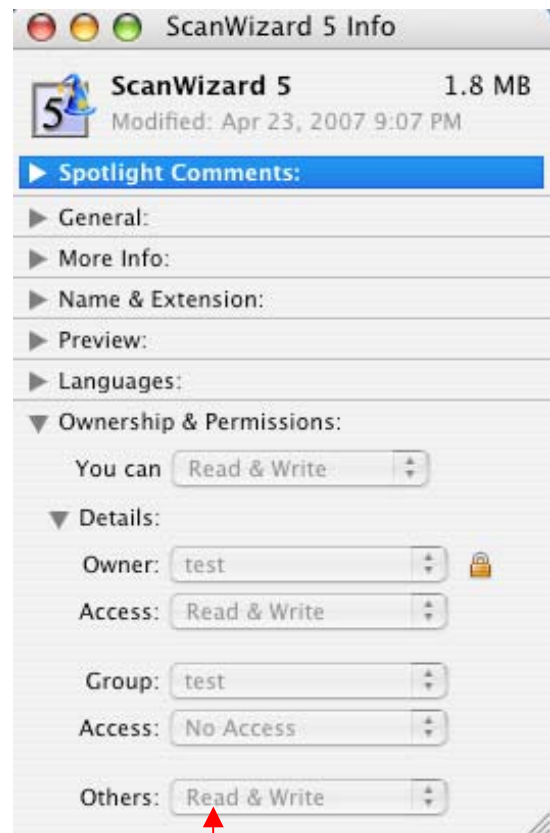

Here is permission from owner with **Test (administrator)** account, and allow **Others** account : **Guest** or **David** to access the application for “ **Read & Write** “.

5. If you complete the setting from owner with **Test (administrator)** account accordingly, by this way, Microtek scanner can run with ScanWizard 5 under Mac OS X system with standard user account.