

The procedure how to install ScanWizard 5 V7.71 into Mac OS X system

The following procedure is an example to install **ScanWizard 5 V7.71** into Mac OS X (10.6.x) system.


1. Double click an icon of “ **SW5 V7.71Release.dmg** ” on Desktop in Mac OS X system as the picture below, after downloading an English version of **ScanWizard 5 V7.71** from Microtek URL at http://ww1.microtek.com.tw/download/sw5_771.dmg (file size : 50.4M Bytes)




2. Double click the icon of “ **ScanWizard 5 V7.71 mpkg** ” as the picture below, and then start the installation of ScanWizard 5 V7.71 into Mac OS Snow Leopard system.




3. Click “Continue” to proceed the installation of ScanWizard 5 V7.71 as the picture below.

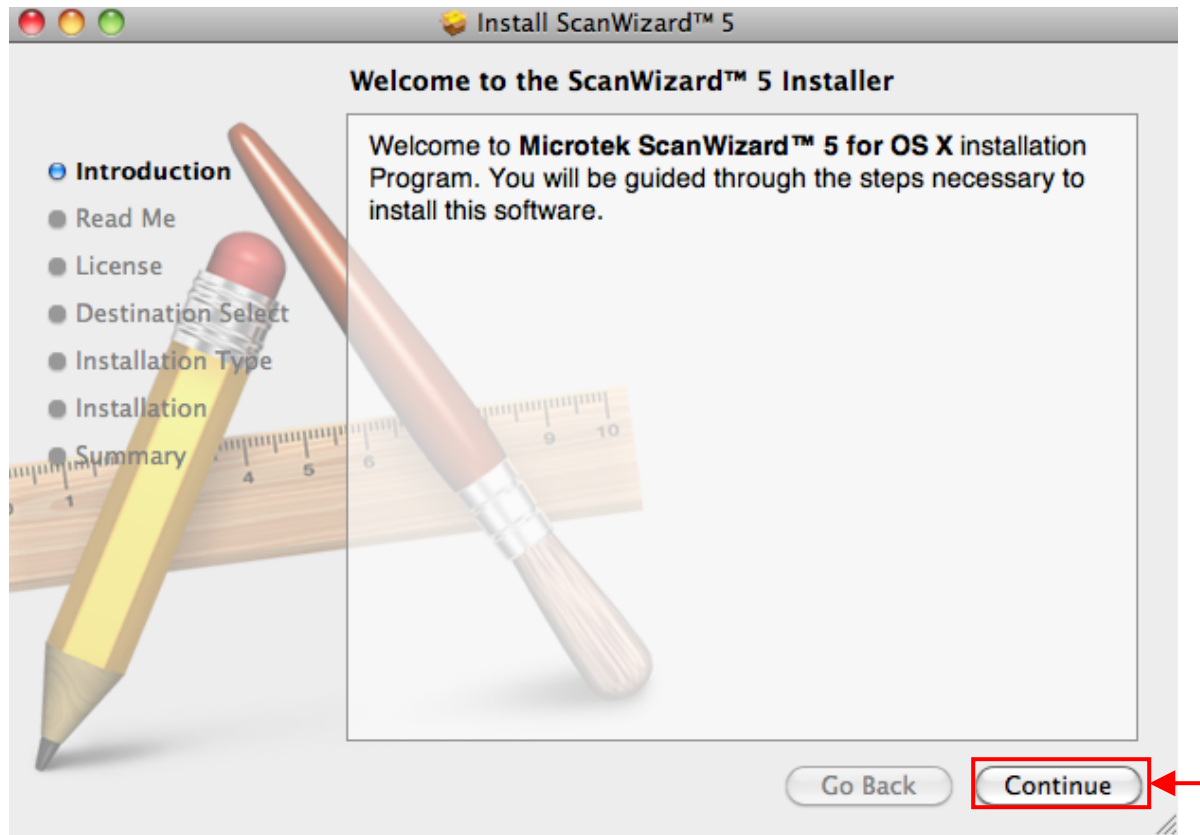


4. Click “Continue” in Read Me of ScanWizard 5 Installer as the picture below.

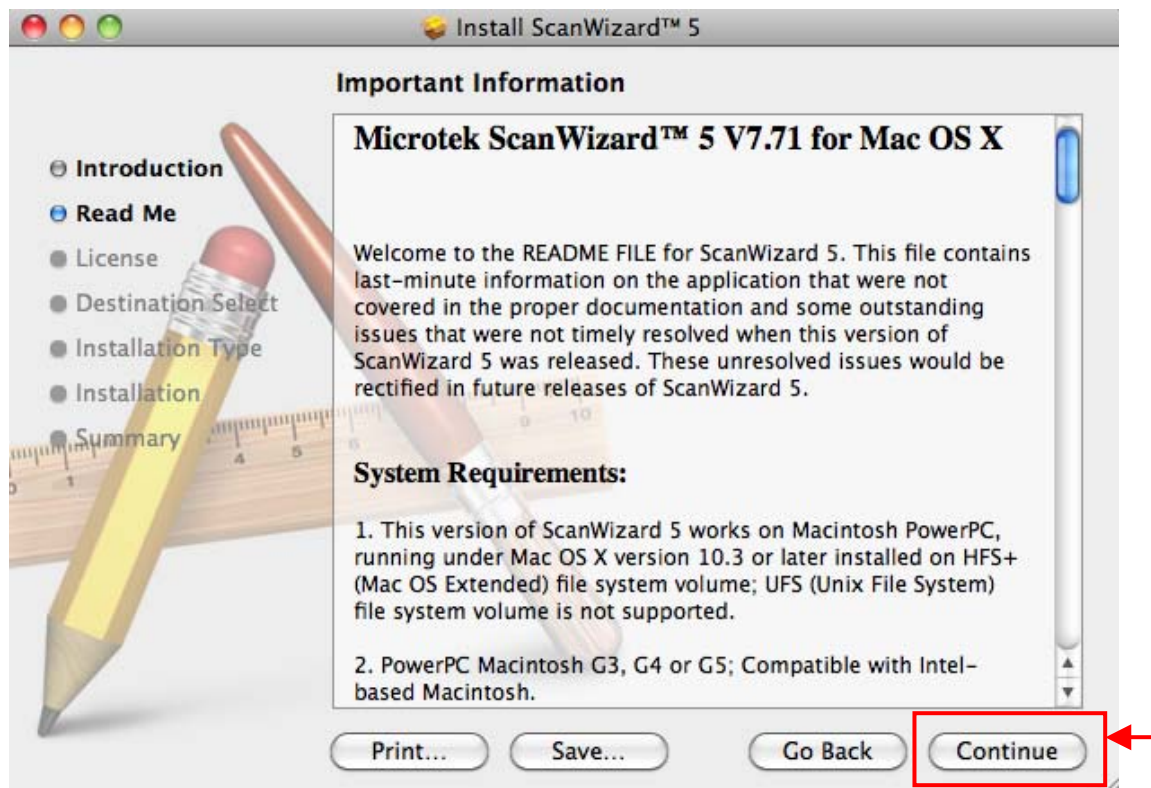



5. Click “Continue” in License Agreement of ScanWizard 5 Installer as the picture below..

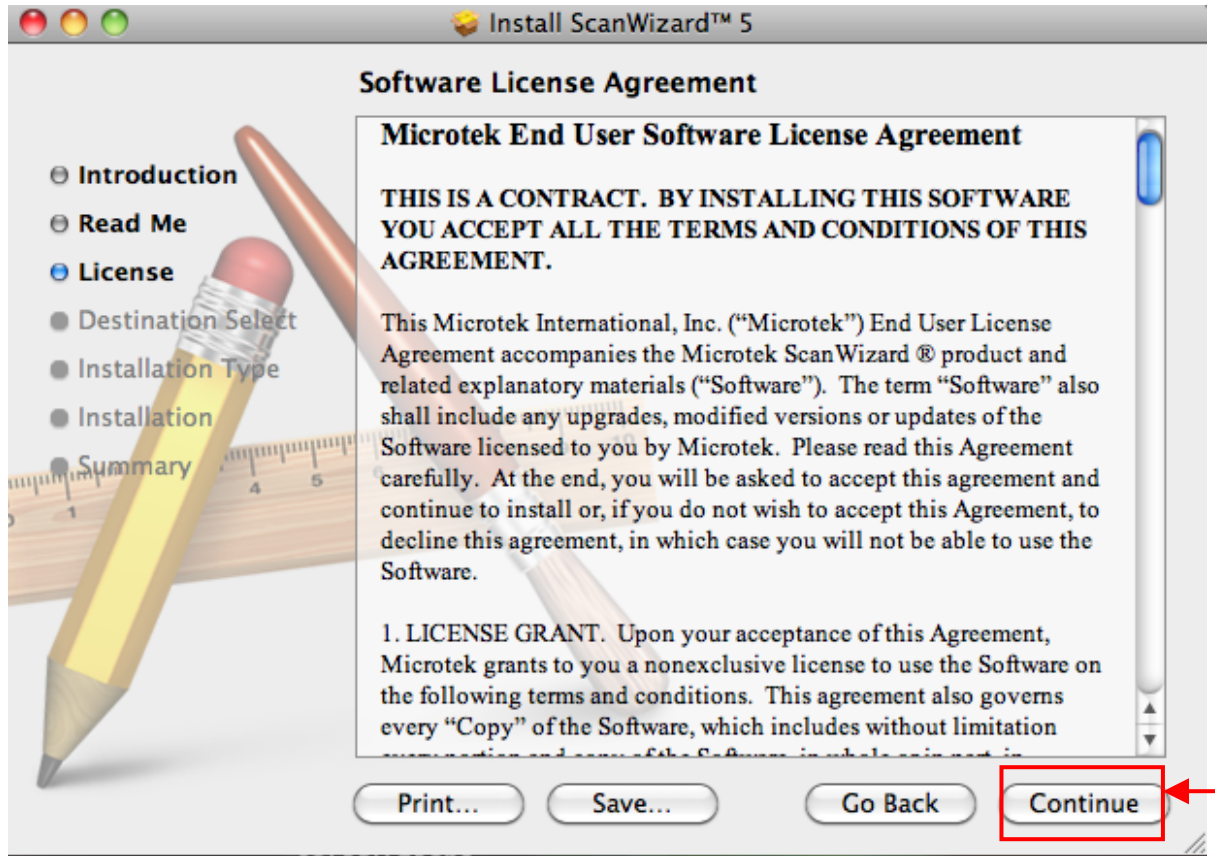


6. Click “Agree” in S/W License Agreement of ScanWizard 5 Installer as the picture below.

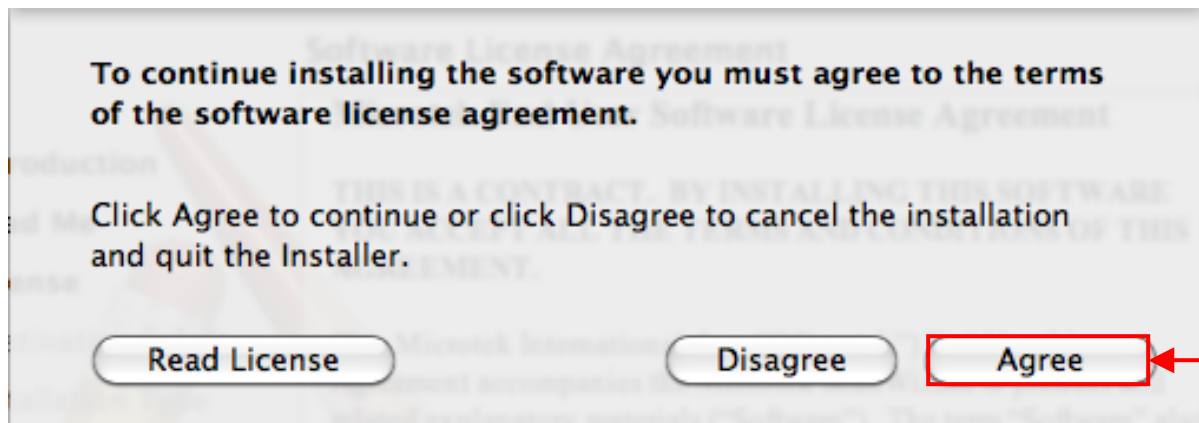


7. Click “Install” to install ScanWizard 5 V7.71 into Mac OS X 10.6 system as the picture below.

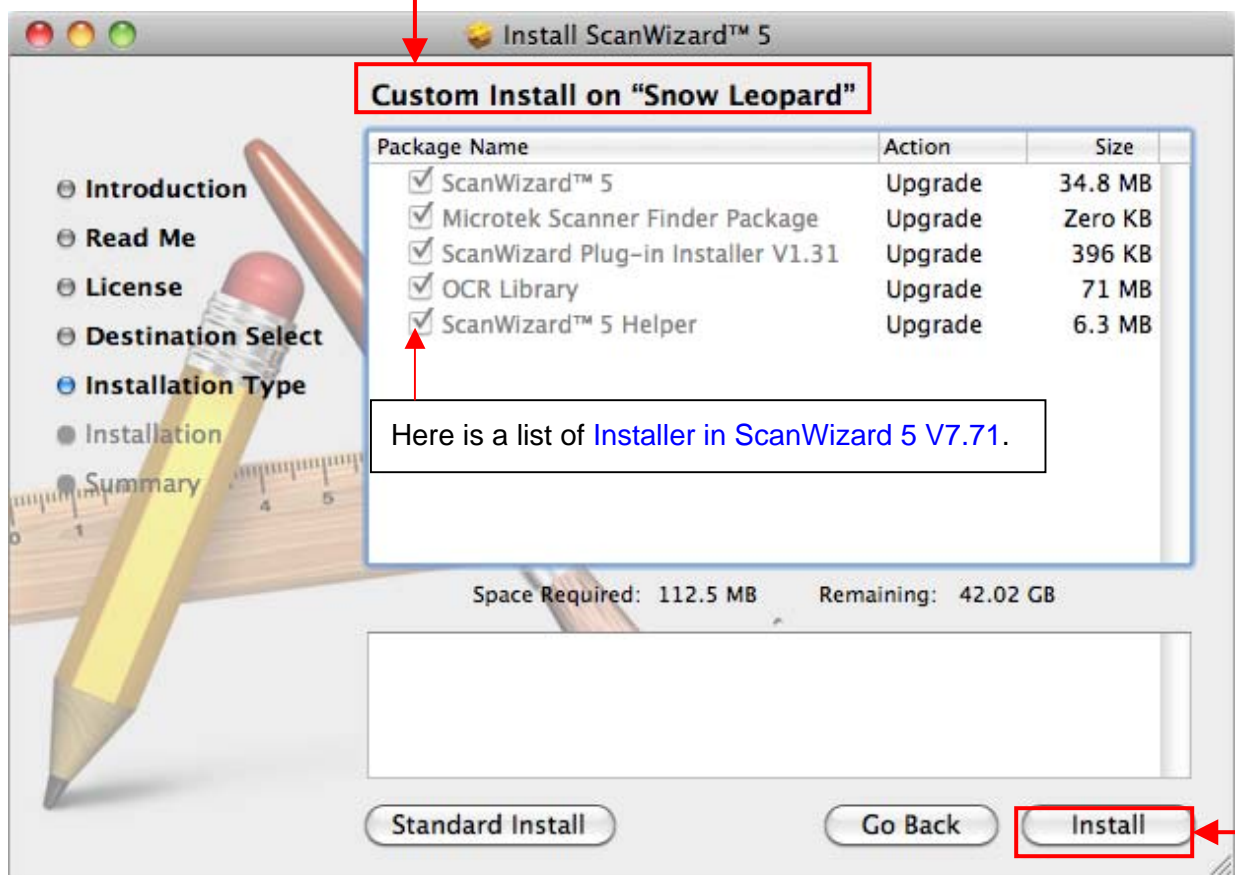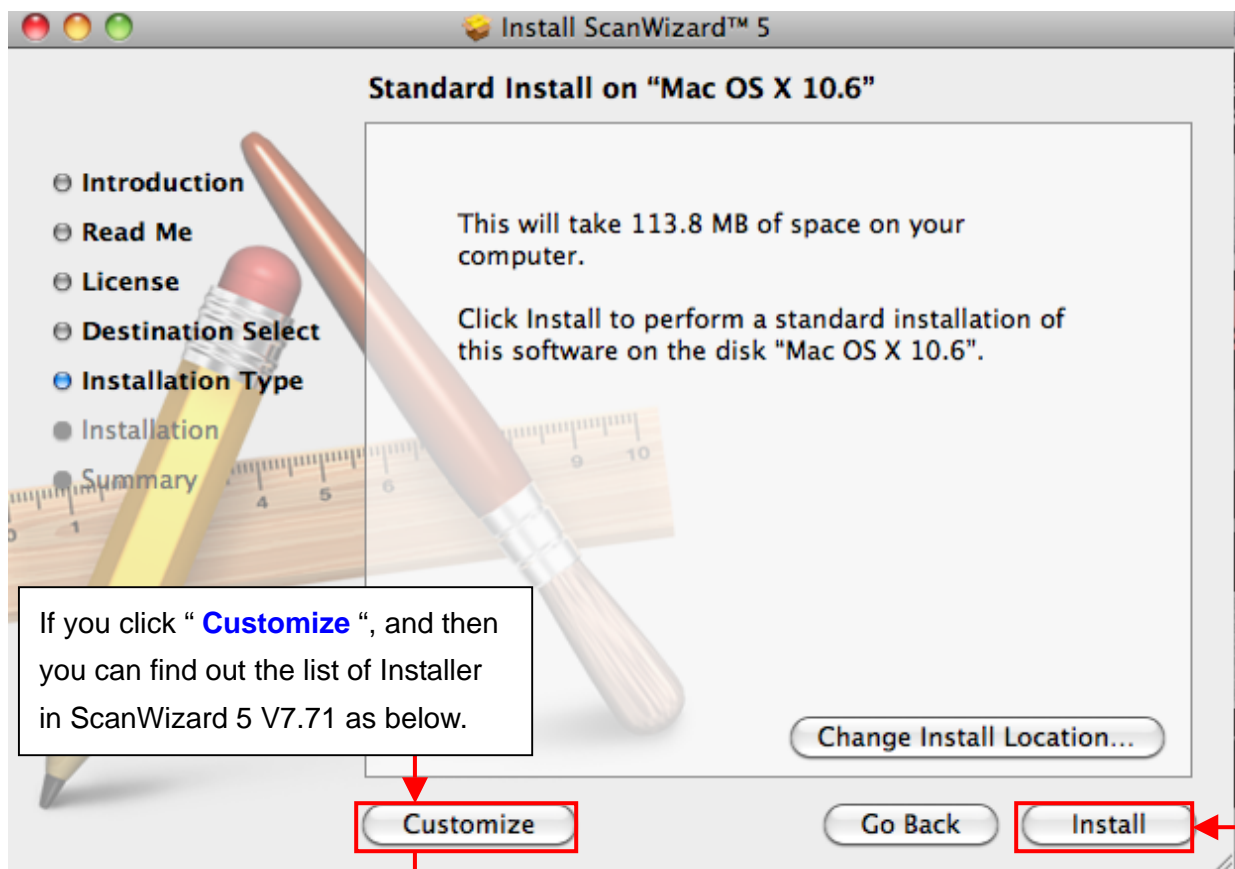

8. Type “ **Password** “, and then click “ **OK** “ to proceed the installation of ScanWizard 5 V7.71.

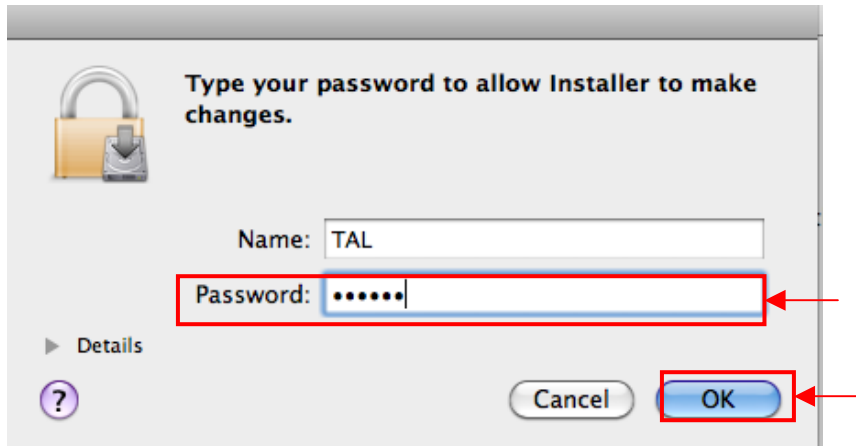


9. Proceed the installation of ScanWizard 5 V7.71 into Mac OS Snow Leopard system as below.

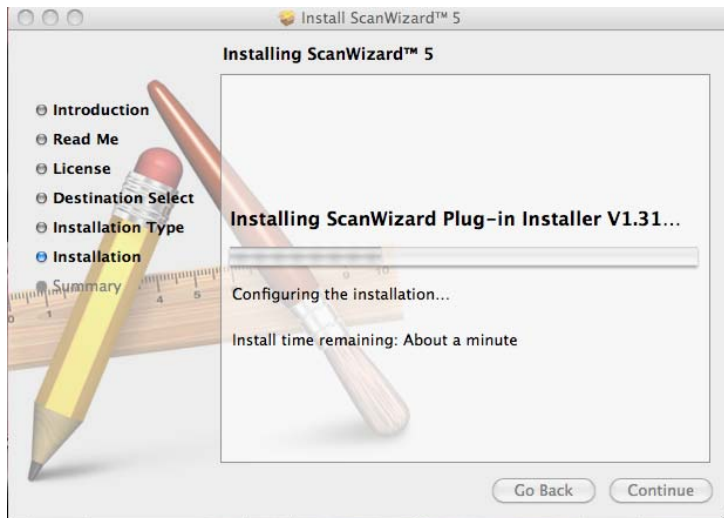

10. Click “ **Install** ”, and then select Application of Plug-in installer for ScanWizard 5 as below picture.




10.a Select to locate the **Plug-in Application** : **Adobe Photoshop Element** to acquire ScanWizard 5 V7.71 under Mac OS X 10.6 system. After that, click “ **Install** ” to proceed.

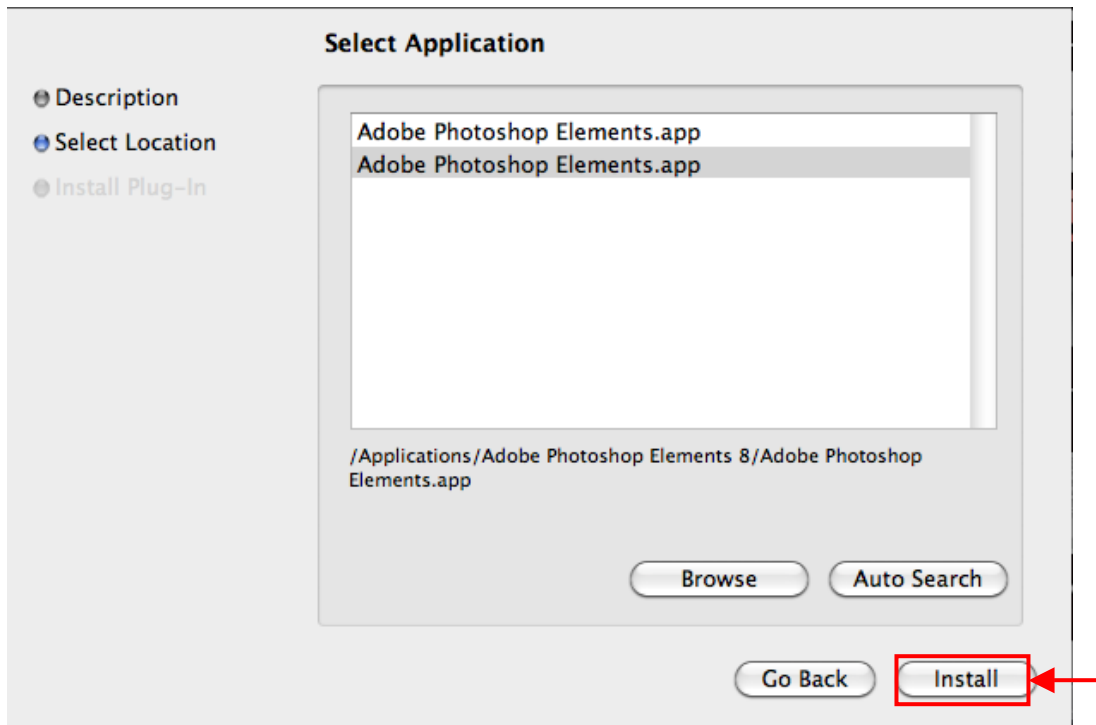

10.b Click “ **Quit** ” after the Installer of ScanWizard Plug-in is completed.




11. Click “ **Close** ” to complete the installation of ScanWizard 5 V7.71 into Mac OS X 10.6 system.

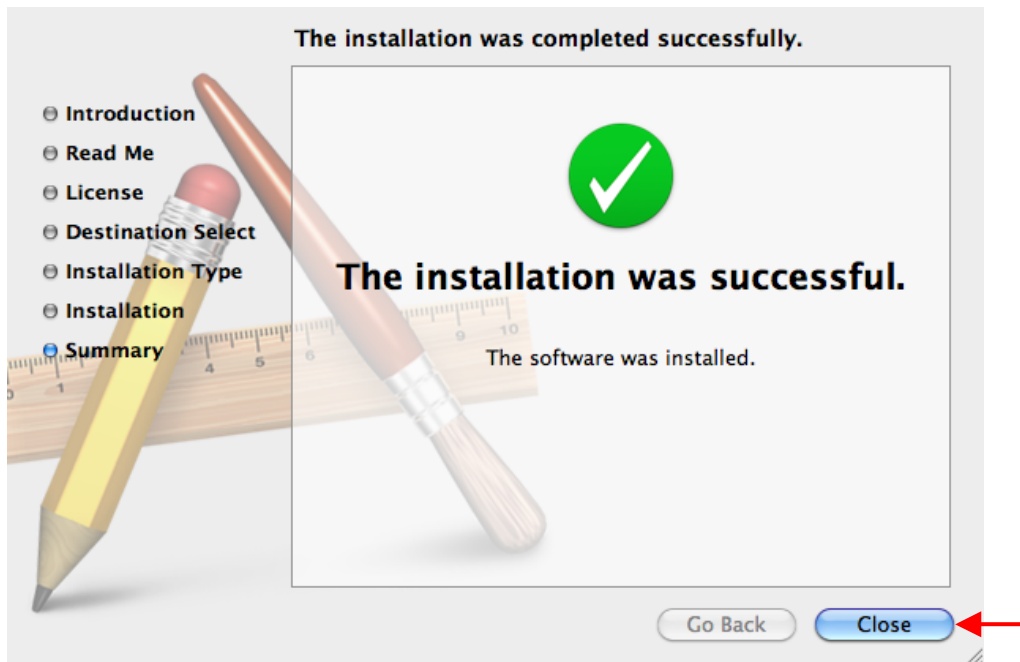

12. After the installation of ScanWizard 5 is completed, and then you can find out there are three Icons : **ScanWizard 5**, **Microtek Scanner Configuration** and **My Images** will pop up on Desktop as the picture below.




13. Make sure your Microtek scanner : ScanMaker s450 is powered up and link with Mac computer through an USB2.0 connectivity at first, and then click the icon of **ScanWizard 5** on Desktop, after that, ScanMaker s450 will do Preview scan in Standard Control Panel of ScanWizard 5 as below.

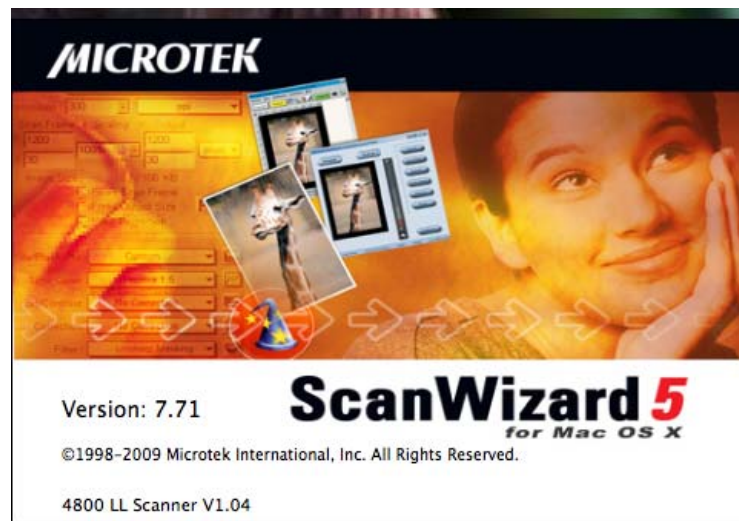




Here is a switch icon between **Standard Control Panel** and **Advanced Control Panel** of ScanWizard 5.


14. If you click a switch icon and change the User Interface of ScanWizard 5 from Standard Control Panel to Advanced Control Panel, and then there is a message will pop up on screen as below. Please click “**OK**” to proceed when the message list you as the picture below.

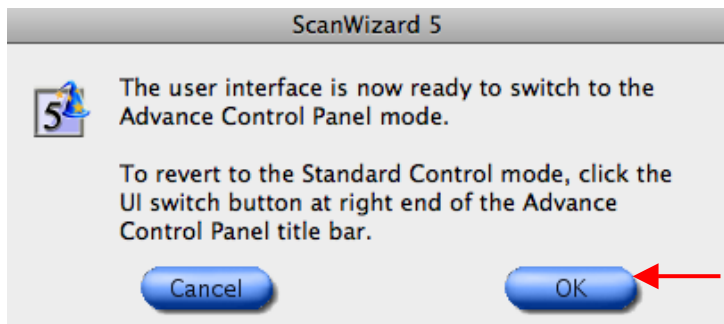


Please click “**OK**” to proceed when the message list you as the picture below.

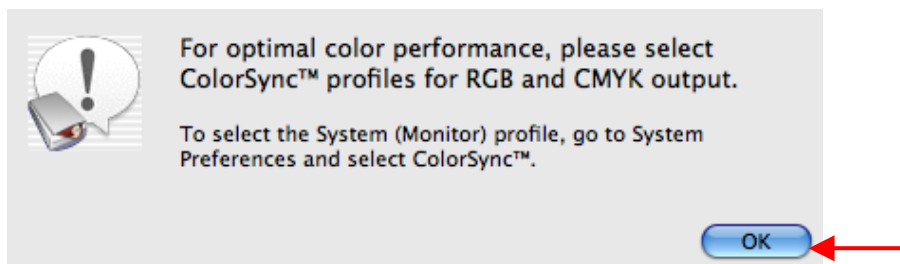

Please click “**OK**” to proceed when the message list you as the picture below.

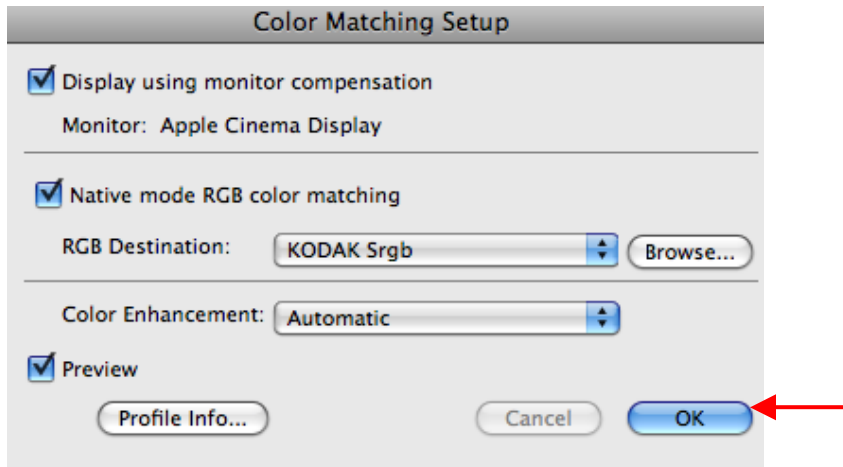

Here list ScanMaker s450 work in Advanced Control Panel under Mac OS X 10.6.5 system.

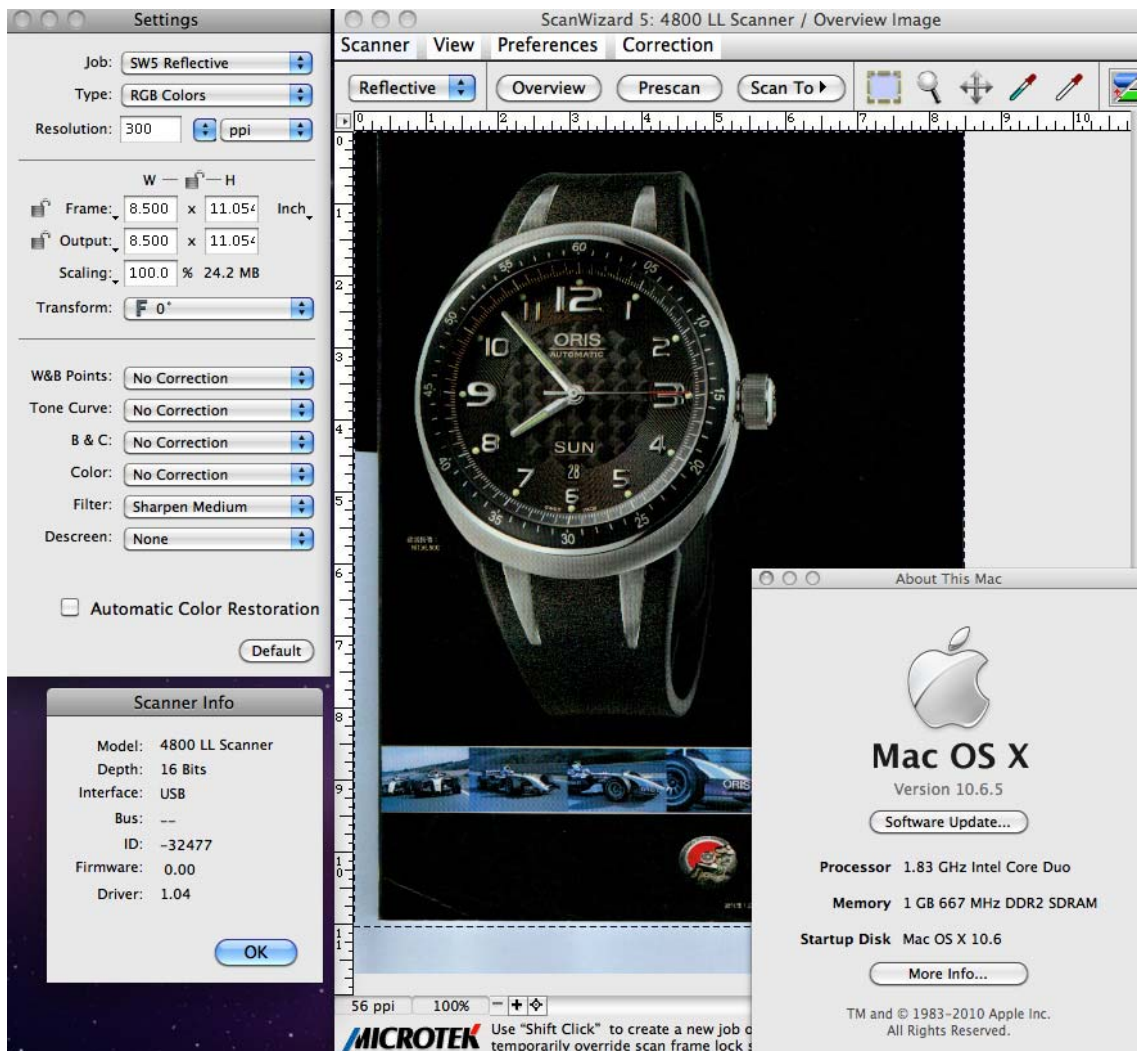

P.S. : **ScanWizard 5 V7.71** or later version can support ScanMaker s450 / ScanMaker s480 / ScanMaker s280 / ScanMaker 6000 / **ScanMaker 5800II** (S/N : Wxx**56B**xxxxx or S/N : Wxx**081**xxxxx) to work under Mac OS X (**10.3.x ~ 10.6.x**) system through USB2.0 connectivity.