
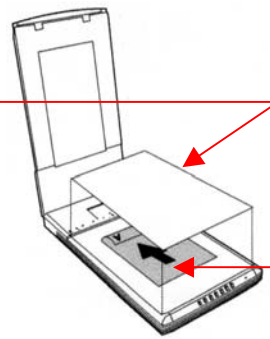


How to enable Auto Crop function in ScanWizard 5

Auto Crop Feature in Photo Mode : The placement of **White Pressure Plate** (P/N : 215-01-910018) on ScanMaker s480.


For the automatic cropping feature to work properly during preview scan of your photo, make sure this white pressure plate is placed on top of photo in scanner bed before you launch **MSC**, or you run in **Standard Control Panel of ScanWizard 5**.

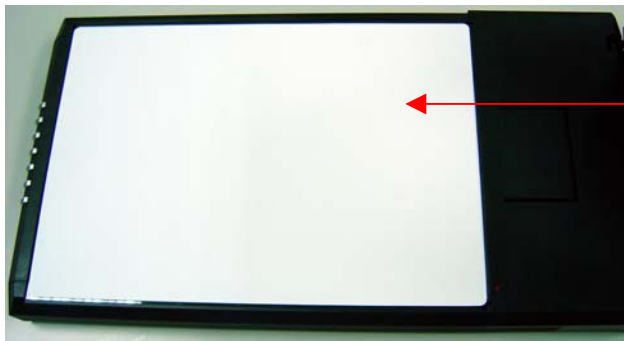

Here is **white pressure plate**. The customer shall place it on top of photo before the customer select to do photo scanning in ScanWizard 5, or in MSC.

Here is photo for scanning.

Each Button Function in control panel of SM s480 can be set in utility : **Microtek Scanner Configuration**.

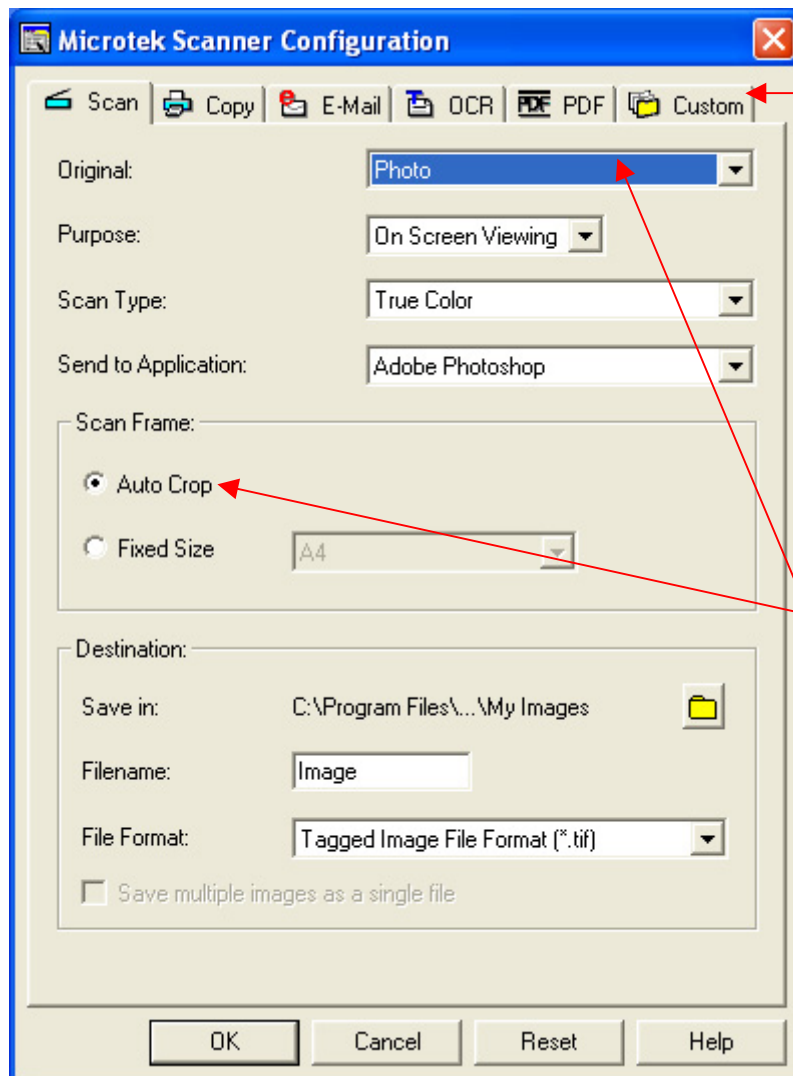

When "**Scanner Finder**" detect ScanMaker s480 has linked with PC / Mac via USB connection successfully, by this way, you can launch utility : "**Microtek Scanner Configuration**" as left illustration, and define the setting for **Scan** Button, **Copy** Button, **E-Mail** Button, **OCR** Button, **PDF** Button and **Custom** Button in "**Microtek Scanner Configuration**".

The **Auto Crop** feature in **photo scanning** is only enable in **MSC** (**Microtek Scanner Configuration**), and in **Standard Control Panel of ScanWizard 5**. This feature can not apply in Advanced Control Panel of ScanWizard 5.

The button function in **MSC** support for **photo scanning** only, and do not support for film scanning.

Below illustration show Auto Crop feature in photo mode of Standard Control Panel in ScanWizard 5.




ScanWizard 5 implement auto crop feature in photo mode of Standard Control Panel, hence, you can find out the selected scan frame is done automatically after image preview.

Auto Crop Feature in Film Mode : The placement of Template on ScanMaker s480.

Using the film holders (Template) ensures precise alignment of film to yield consistent scans, and aids in the correct performance of the automatic cropping feature during film scanning. There are four types of template are bundled into the package of ScanMaker s480. These templates are as follows.


1. Slide Template (P/N : 215-00-910008).
2. 135 Template (P/N : 215-00-910010).
3. 4" x 5" Template (P/N : 215-00-910009).
4. 120 Template (P/N : 215-00-910007).

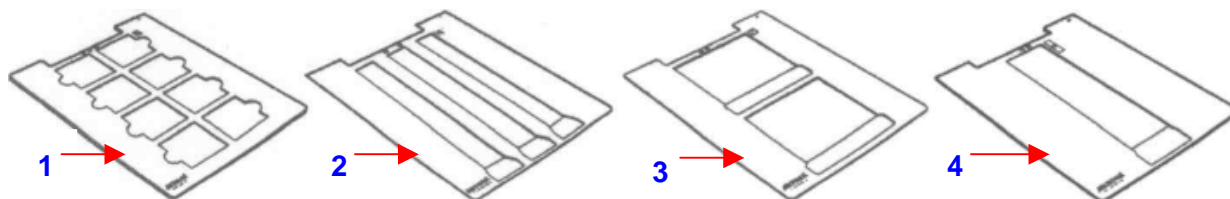

Notes on Auto Crop feature for film scanning in Advanced Control Panel of ScanWizard 5.


For the scanner to perform automatic cropping feature during preview scanning in film mode, the following conditions should all be met : ([MSC do not support film scanning](#), and [Standard Control Panel do not support auto crop feature for film scanning](#).)

- Your computer's operating system should be either Windows or Mac OS X.
- The film holder (template) is correctly aligned on the scan bed.
- The scan material is Positive or Negative Film, with the slide or filmstrip to be scanned correctly loaded on the film holder (template).
- The Scan Job Queue window in Advanced Control Panel of ScanWizard 5, the " [Multiple Auto-crop for EZ-Lock Film Holder](#) " option is checked.

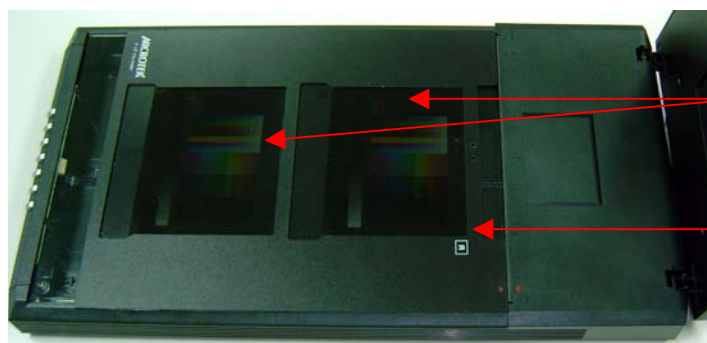

Here is 4" x 5" film target in template of SM s480.

Here is 4" x 5" Template on scanner bed of SM s480.

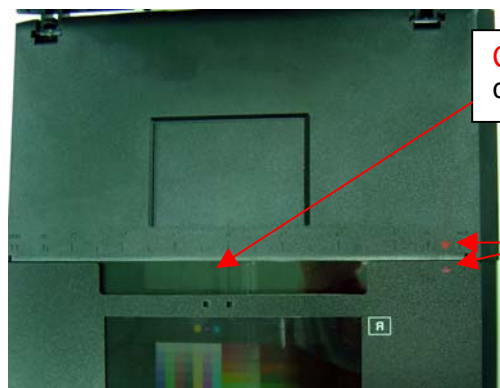

Calibration Window on the glass surface shall be kept clear and free from any obstruction during film scanning.

The placement of template on scanner bed shall check the alignment of **red arrow mark** between scanner and template, ensures precise alignment of film to yield consistent scans, and aids in the correct performance of the automatic cropping feature during film scanning.

The option of " **Multiple Auto-crop for EZ-Lock Film Holder** " shall be checked in Scan Job Queue window from Advanced Control Panel of ScanWizard 5, it is to perform automatic cropping feature during Overview scanning in film mode.

