


## The way how to make file size of PDF format get smaller in ScanWizard 5


The default setting for encoding of PDF is " ZIP " in ScanWizard 5, if you want to make the file size of PDF get smaller, by this way, the setting of Encoding format shall change from " ZIP " to " JPEG " in " File Option.. ". The procedure to change the setting of Encoding format is as follows.

( The function of PDF compression is available in ScanWizard 5 V5.95 or its later version )

1. If you select to save file format of scanned image as PDF, and the scan type in " Settings " Window of ScanWizrad 5 is Color or Gray, by this way, you can find out the " File Option.. " will list you in File Saving of ScanWizard 5 as below illustration.

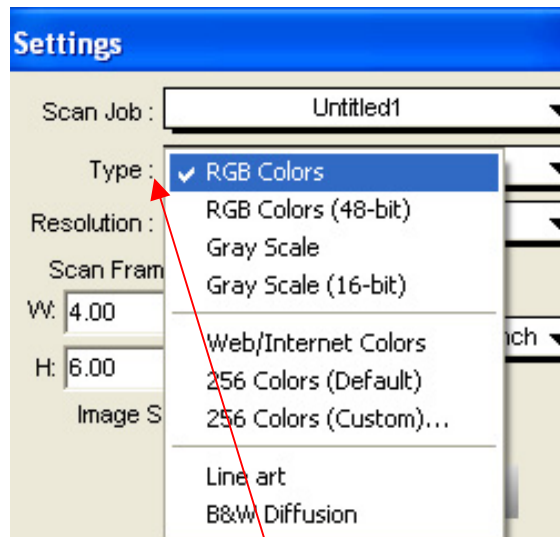


Here is Color Type setting in " Settings " Window of ScanWizard 5.

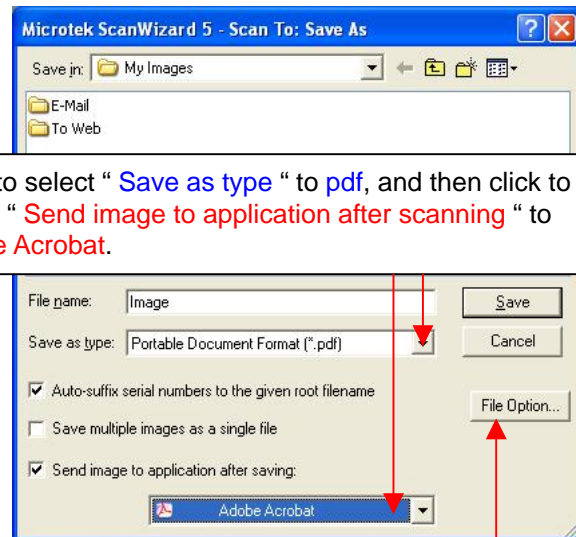


Here is " File Option.. " in File Saving of ScanWizard 5.

2. Click " File Option.. ", and then select to change Encoding format of PDF file from " ZIP " to " JPEG " as below illustration. ( The encoding of " JPEG " can make smaller file size than " ZIP ". )

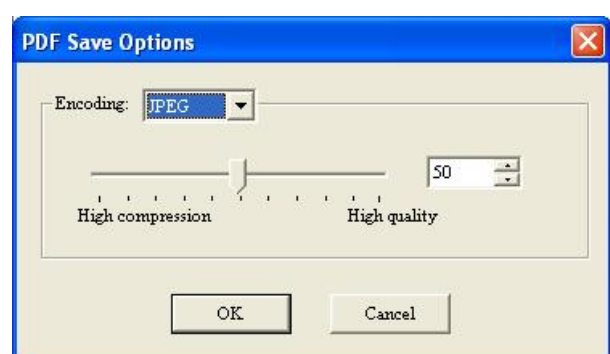


3. If you want to keep the file of PDF with high quality, by this way, the encoding of JPEG will give lower PDF compression, and make the file size of PDF get bigger.

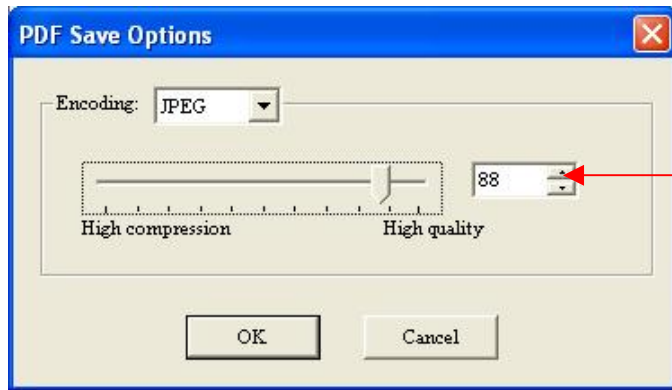


If the setting is going higher, then the encoding of JPEG will give lower PDF compression, and make the file size of PDF get bigger.

4. If the encoding of JPEG give high compression, by this way, it will make the file size of PDF get smaller.

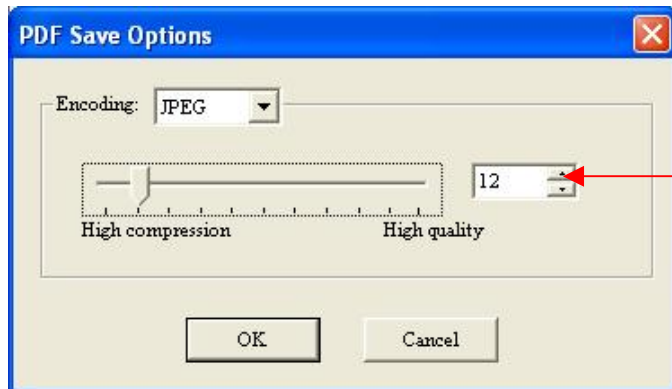

If the setting is going lower, by this way, the encoding of JPEG will give high compression, and make the file size of PDF get smaller.

5. Complete the setting in **Scan To**, and then scanner will do image scanning after you click “ Save ” as below illustration. ( The scanned image will be saved as pdf file and will be opened by Adobe Acrobat directly after image scanning is completed. )

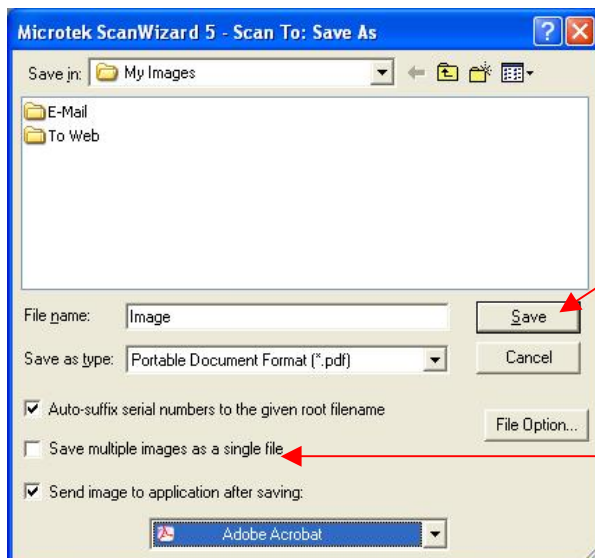

Click “ **Save** ”, and then scanner will start to do image scanning.

If the file format is **\*.TIF**, or is **\*.PDF**, or is **\*.DCX**, and then the function of “ **Save multiple images as a single file** ” in ScanWizard 5 will be enable.