

The function of **Save multiple images as a single file** in stand alone version of SW 5


After you complete to install scanner driver : ScanWizard 5 into PC Windows system, and then you can find out the icon of “ **Microtek Scanner Configuration** “, “ **ScanWizard 5** “, and “ **My Images** “ will list you on the Desktop of PC Windows system as below illustration.



Double click the icon of “ **Microtek Scanner Configuration** “ from the Desktop of PC Windows system, by this way, you can get into the setting of “ **Microtek Scanner Configuration** “, define the setting of each button function, do image scanning with Microtek scanner by pressing button on control panel of scanner.



Double click the icon of “ **ScanWizard 5** “ from the Desktop of PC Windows system, and then you can get into stand-alone version of ScanWizard 5 and do image scanning with Microtek scanner.

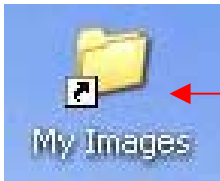


All of scanned images in ScanWizard 5 will be saved into **folder : My images**, its default path in PC Windows system located at “ **C:\Program Files \ Microtek \ ScanWizard 5 \ My Images** ”.

So far, if the file format is ***.TIF**, or is ***.PDF**, or is ***.DCX**, and then you can select the function of “ **Save multiple images as a single file** “ in stand alone version of ScanWizard 5 or in MSC (Microtek Scanner Configuration “ under PC Windows system.


Below message is the procedure about the function of “ **Save multiple images as a single file** “ in stand alone version of ScanWizard 5.

(A). Select the file format as ***.TIF**, or ***.PDF**, or ***.DCX** in ScanWizard 5, and then the function of “ **Save multiple images as a single file** “ will be enable as below illustration.

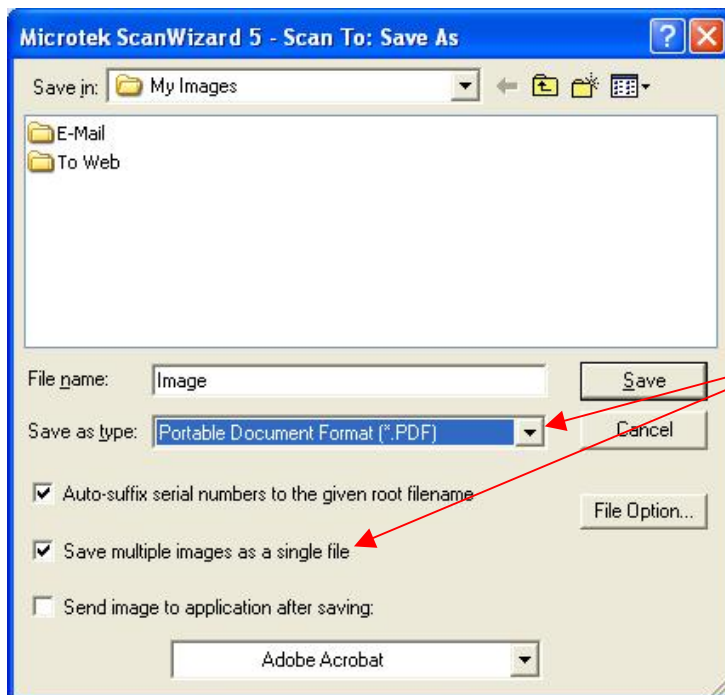


If the file format is ***.TIF**, or is ***.PDF**, or is ***.DCX**, and then the function of “ **Save multiple images as a single file** “ in ScanWizard 5 will be enable.


- (B). Below illustration is the message during image scanning at the first scanning after you enable the function of “ [Save multiple images as a single file](#) ” in ScanWizard 5.

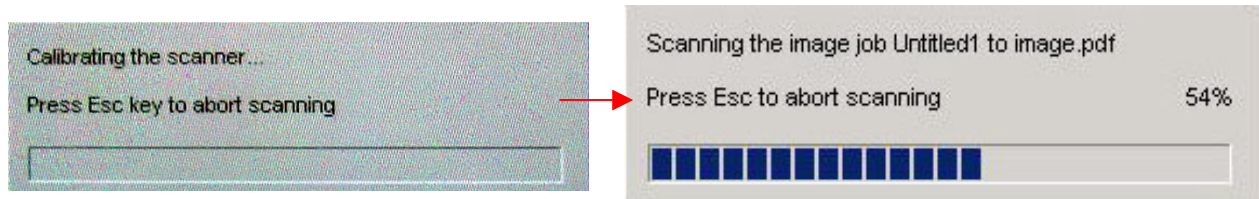


- (C). Below illustration is the message after the first scan job is completed.

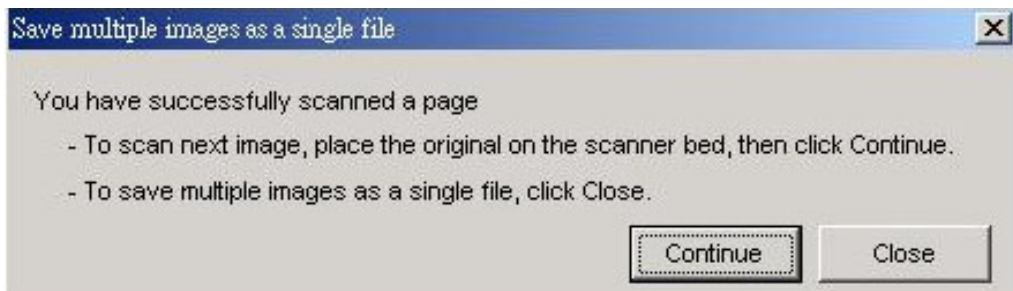

- (D). If you click to select “ [Continue](#) ” by mouse, and then the scanner will do the second scanning as below illustration.

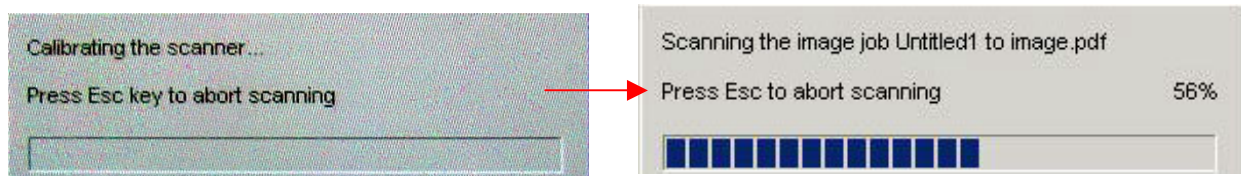

- (E). Below illustration is the message after the second scan job is completed.

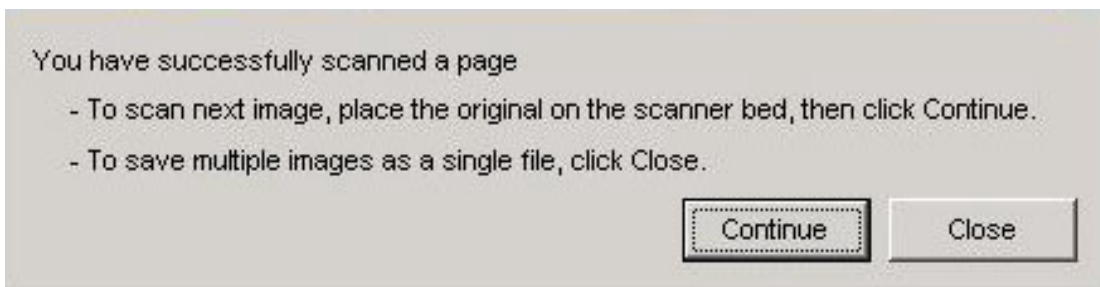

- (F). If you completed the scan, you can click to select “ [Close](#) ” to end this scan job.