

## The procedure how to format your SD card with MV500

1. Make sure your MV500 is powered off, and then open SD cover of Take-it MV500 as below illustration



2. Insert and push SD Card (1Giga Byte) into the compartment until you hear a “click” sound, and make sure SD card is secured in the compartment well, after that, close SD cover of MV500.



3. Power up MV500 and check the recording time of MV500 in Video Mode as below illustration.



03 :18 :28 means the memory capacity of MV500 still can take a video recording for 3 hours, 18 minutes and 28 seconds at the setting with 320 x 240 pixels / normal mode in Video Mode.


Here is the setting of MV500 in Video Mode.

4. Press “MENU” Button of MV500, and then get to the “Video Setting” mode of MV500 as below illustration.



Here is MENU Button in MV500.

5. Press “ **Right Arrow** “ **Button** of MV500, and then get to the “ **Setup** “ Mode of MV500 as below illustration.

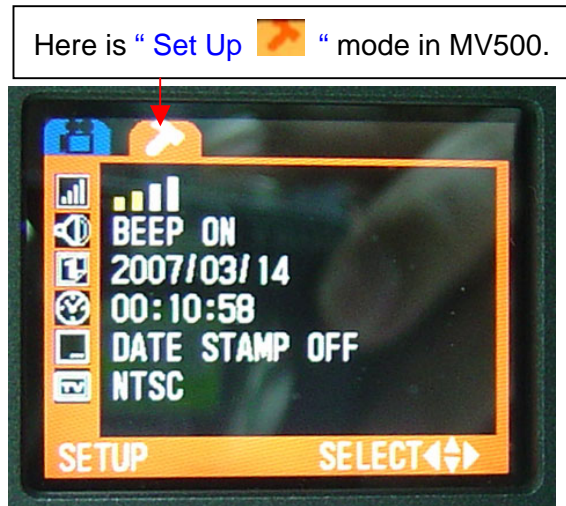


Here is **Right Arrow** **Button** in MV500.

Here is **OK** **Button** in MV500.

Here is **Down Arrow** **Button** in MV500.

6. Press “ **Down Arrow** “ **Button** of MV500, and then scroll it down to “ **FORMAT** “, after that, press “ **Right Arrow** “ **Button** of MV500, and view the message in display as below illustration.

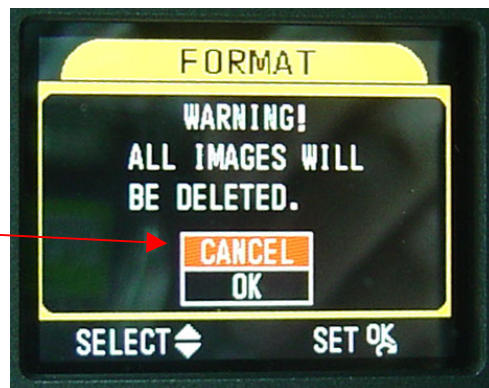

7. Press “ **Down Arrow** “ **Button** of MV500, and then click “ **OK** “ **Button** of MV500, after that, MV500 will start to format SD card, and the message in display will show “ **BUSY** “ as below illustration.



8. Complete to format SD card in MV500, and then press “ **Down Arrow** “ **Button** of MV500 until you scroll to USB icon of MV500, and make sure the setting is in **USB Mode**.





Scroll to USB icon , and make sure the setting is in USB Mode.

9. Press “MENU” Button of MV500 twice, and then exit the setting of MV500 from “Setup” mode.



Exit the setting of MV500 from “Setup” mode to “Video” Mode.  
Here is “Video” Mode in MV500.

10. Power off MV500.

### The procedure how to transfer Video / Photo files in MV500 from MV500 to your PC

1. Complete to install the driver of Take-it MV500 under PC Windows system at first.
2. Power up MV500 and open LCD panel with 90 degrees rotation, and then connect USB cable from PC to MV500 as below illustration.



Make sure PC and MV500 are powered on prior to plugging in the USB cable.



This is USB Sticker ( P/N : 219-21-740055 )

3. If LCD screen show you the message as “USB mode” in display after USB connection between PC and MV500, it means your camera setting is in USB mode now, by this way, you can copy the file from camera to PC directly.



If camera setting is in USB mode, and then the LCD screen will show the message “**USB Mode**” as left illustration after USB connection from PC to camera : Take-it MV500.  
This message “**USB Mode**” will show up in LCD screen for few seconds only.

4. If camera setting is in **USB mode**, you will not find the device information in Device Manager of Control Panel under PC Windows system. But you will find out the information of **removable disk** from Explorer of Windows system, **the disk information of Take-it MV500 in PC Windows system will show you as below illustration.**



All of Video / Photo files in camera will save in folder **G: Dicm / 100\_mtdv /**.

**G :** is an icon of **removable disk** for camera : Take-it MV500 under PC Windows system.